

Quick Start Guide

WHAT'S IN THE CASE

<input type="checkbox"/>	Chromebook	<input type="checkbox"/>	Hotspot
<input type="checkbox"/>	Power Adapter	<input type="checkbox"/>	USB Cord & Outlet Plug

BEFORE YOU START

Charge the Chromebook and Hotspot

Using the provided charging cables for the Chromebook and Hotspot, it is recommended to fully charge the devices. Fully charging the Hotspot battery may take up to three hours.

GET CONNECTED


Power On the Hotspot

Press and hold the power button for 3 seconds. It can take several minutes for the Hotspot to connect with the Mobile network.

Power Up the Chromebook

Lift the screen up and wait. It can take up to 15 seconds for the Chromebook to power on and cycle through to a web browser

Connect Chromebook to Wi-Fi (Hotspot)

1. In the bottom-right corner of the screen, click into the area with the Wi-Fi symbol 
2. Click "Not connected" to turn on the Wi-Fi. A search for local networks will automatically begin.
3. Locate the label on the Hotspot as this information will have log-in credentials and contact information.
4. Select the wireless network name as displayed on the Hotspot (SSID), click Connect, and enter the Wi-Fi password, also displayed on the Hotspot. It may take up to a minute to establish a connection.
5. Launch your device's web browser.

Note: Restart the device if having issues connecting to Wi-Fi.

(see reverse for more info)

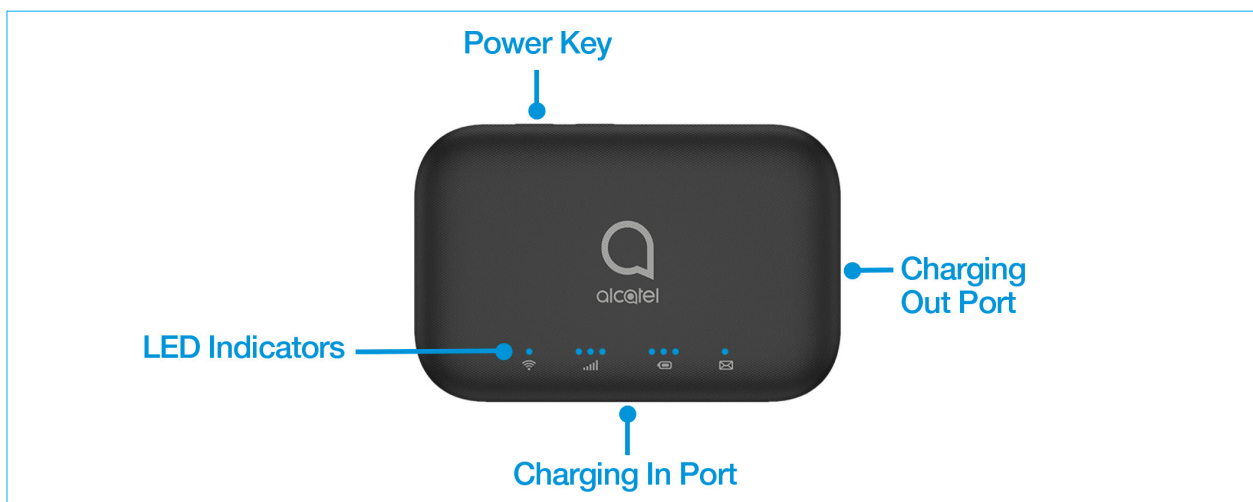


St. Louis County **Library**





Chromebook Tips:

Troubleshooting & Questions	Visit the Chromebook website: www.google.com/chromebook for more information on how to get the most out of a Chromebook.
How to Right-Click	Move the mouse to whatever item you want to right-click on, then tap the trackpad with two fingers at the same time.
Installing Software	Cannot install traditional desktop software. Instead of installing them, users can use the web-based applications.
Storing Files	Users can use a web-based storage service.

Hotspot Tips:



BUTTON OPERATION	ACTIONS
Power key	Press and hold the Power Key for 3 seconds to power the device on/off.
Charging in USB port	Use the USB Type-C port to charge your Hotspot.
Charging out USB port	Use the USB port to charge other devices, such as tablets and smartphones.

INDICATOR	STATUS/DESCRIPTION	
	Wi-Fi Indicator- BLUE light = Wi-Fi is active	
	Coverage Status: Good- 3 Lights Weak- 1 Light	BLUE blinking : Network disconnected RED : No network, SIM card error, limited or no service.
	BLUE blinking : Battery is charging BLUE solid : Battery is good	RED : Battery is low, please charge
	SMS function is not supported by this device.	