

1. Plug the VCR into power.
2. Plug the ClearClick into power.
3. Plug the Red/Yellow/White cables into the ClearClick and the VCR.
4. Press the Power button on the VCR.



5. Press the Power button on the ClearClick device. If the battery symbol appears on the screen, press the Power button again until you see the on screen (pictured below).



6. Insert your flash drive into the ClearClick's USB port.




7. Insert your VHS tape into the VCR.




- The video on the tape will start playing, and will appear on the ClearClick's screen. Rewind the film if needed. Use the buttons beneath the VHS port to control the tape.



- When you are ready to start recording your tape, press the Red Dot button on the ClearClick.

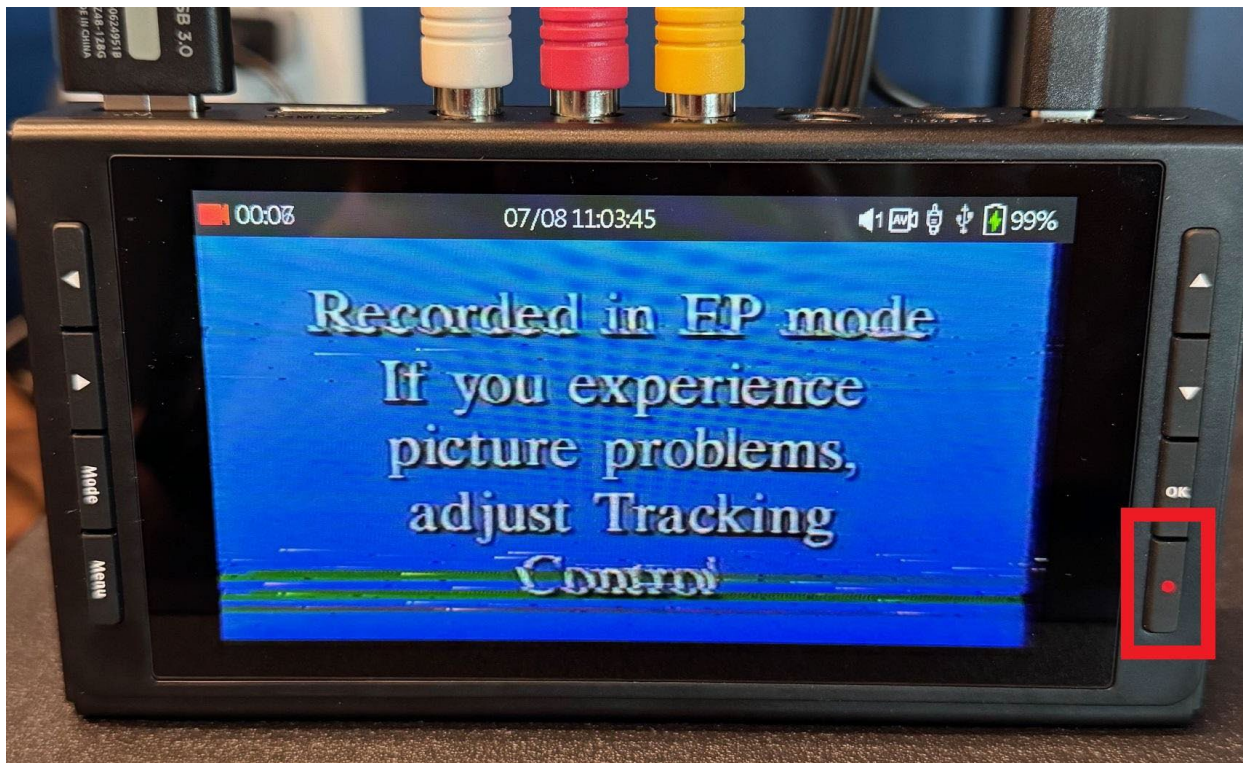

- You will know it has begun recording by the counter in the top left corner.

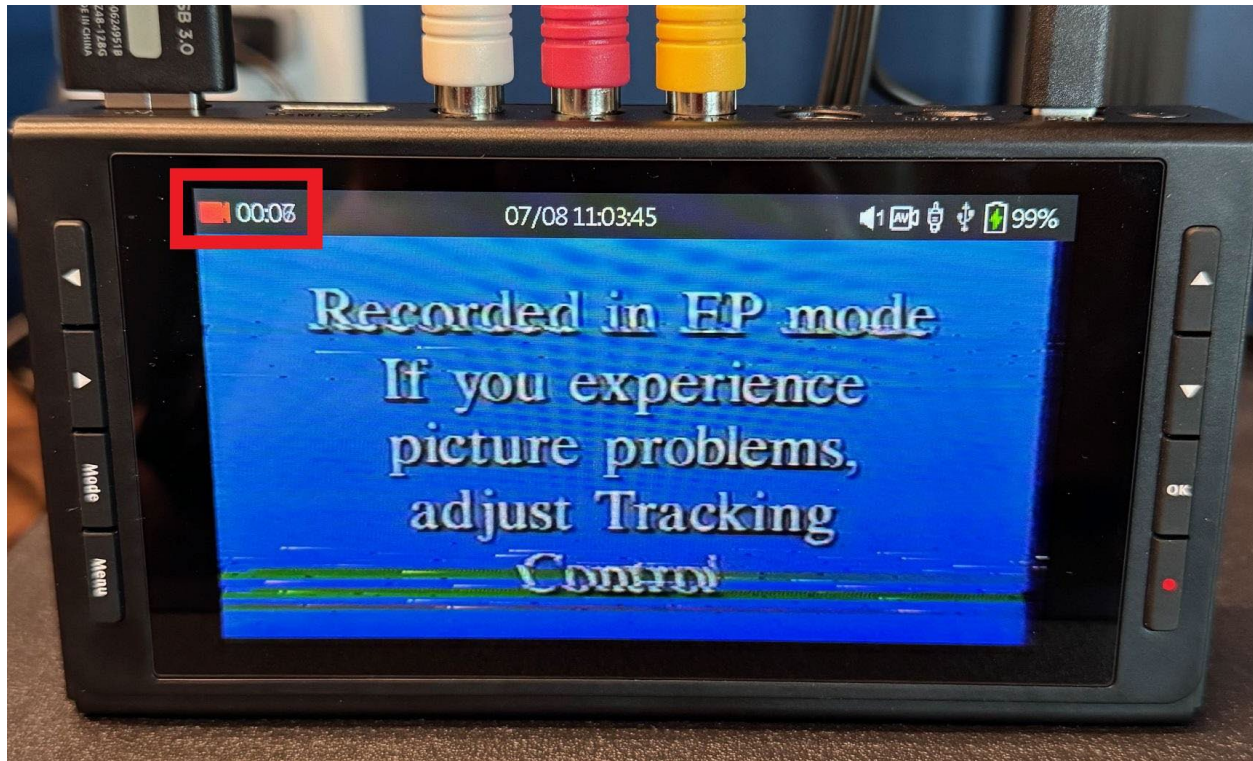

11. When you are ready to stop your recording, press the Red Dot button again. You must do this before you remove the flash drive or the file will be corrupted, and you will have to record the entire video again.
12. When you have finished recording, ensure the recording counter is not running, and then remove your flash drive.
13. Rewind your VHS tape if you so desire.