



1. Plug the Wolverine's power into the wall.
2. Make sure there is an SD card inserted into the back of the machine. If there is not, please see staff.
3. Press the power button right below the LCD screen.
4. If your film is regular 8mm, ensure that the lever is closer to 8mm. If it is Super8 film, slide it towards Super8. (Super8 film has square sprockets while 8mm has rectangular sprockets.)

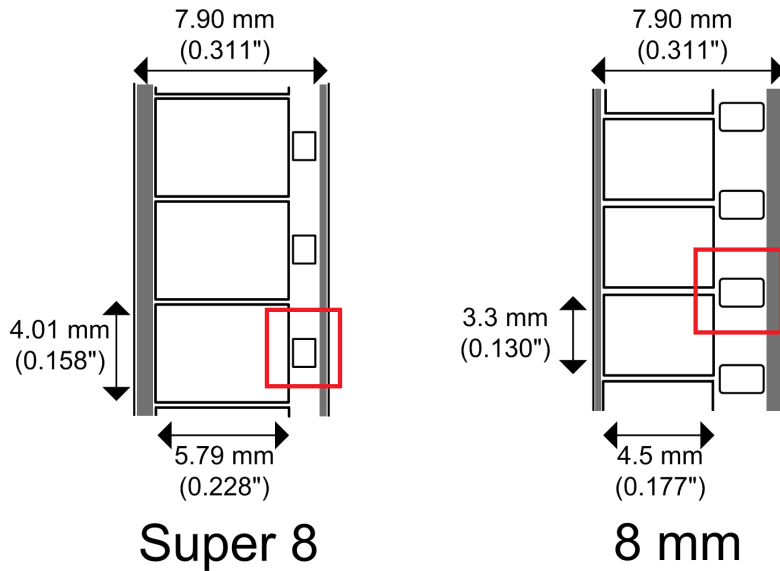


5. If your film reel fits on the left reel holder, load the reel. If it does not fit, use the small red adapter to size it properly.




6. Open the film window flap by sliding the small tab to the left, where it says "Open."
7. Run the film over and under the guide rods per the solid line.

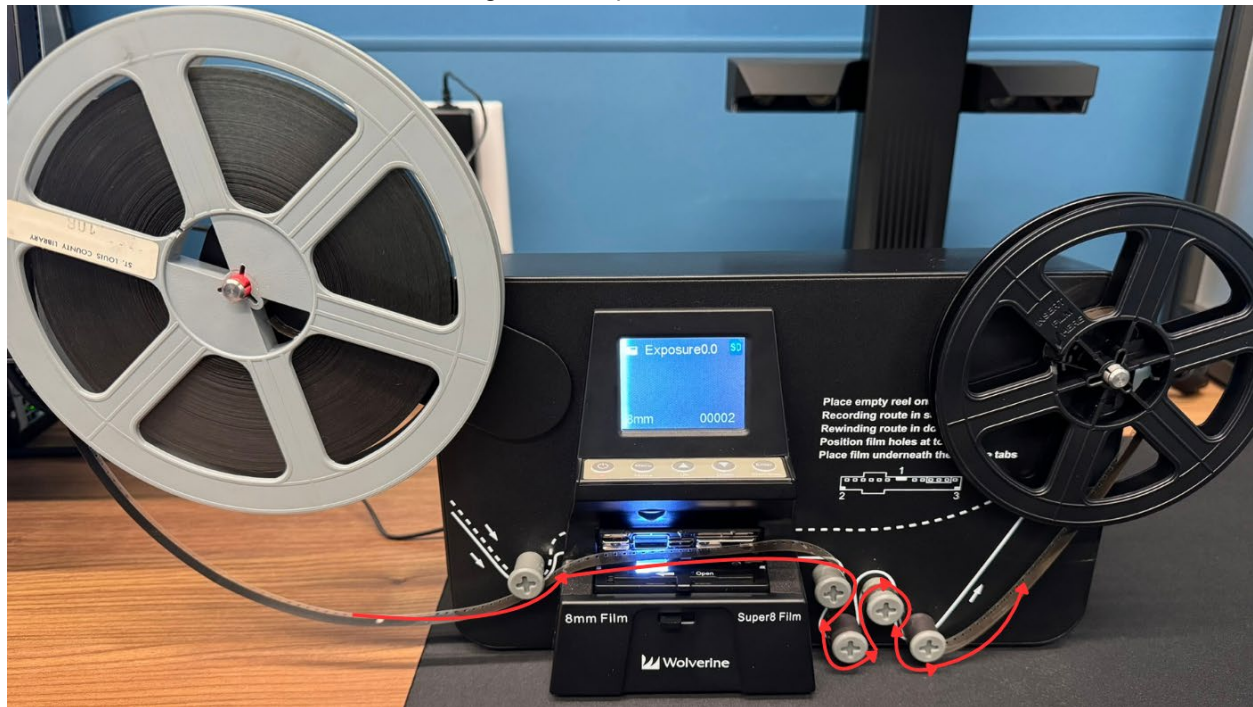

8. Gently twist the film so that it is under the white notches on the film window. (It is easiest to run the film through the guide rods before proceeding to this step.)

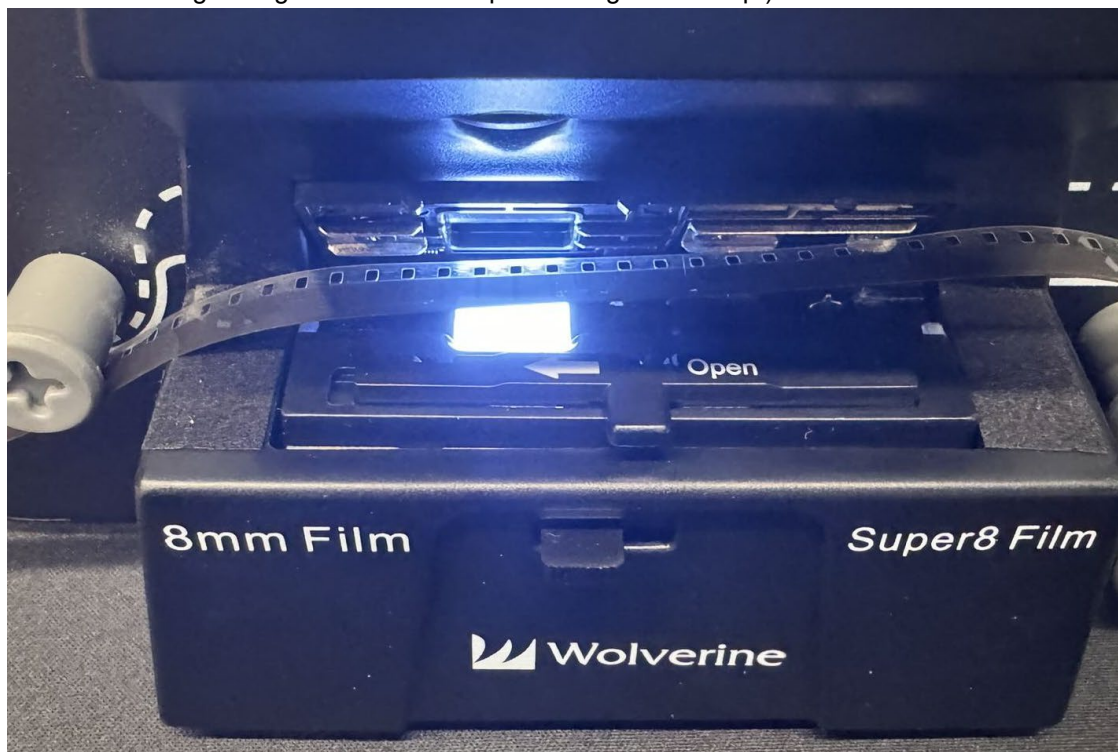



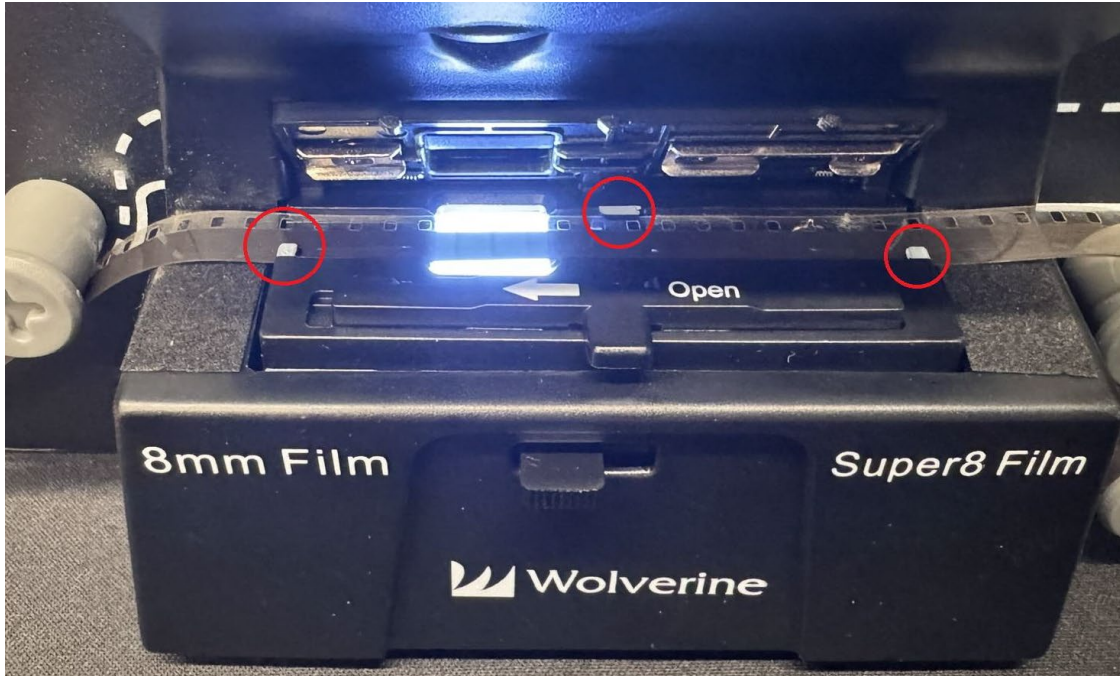

9. Lower the film cover until it clicks into place.





*Film is loaded and notched.*

10. Do not try to roll the film forward once you have notched it.
11. Use the preview mode to roll the film forward, past any blank lead frames. Press the Menu button, then use the Down arrow to navigate to Preview, then click Enter. The film will run, and will stop when you hit the Enter (Start/Stop) button again.



12. To ensure your frames are lined up properly, return to the menu by pressing Menu, then use the up and down arrows to find the Frame Adj option. Press Enter.






13. Press Enter to cycle through X, Y, and W. Use the up and down arrows to adjust the number. X will adjust the frame sideways, Y will adjust the frame vertically, and W will zoom in or out.



14. When you are done adjusting the frame, press the Menu button again.

15. When you are ready to start recording, use the arrow buttons to get to the Record option, then press Enter.

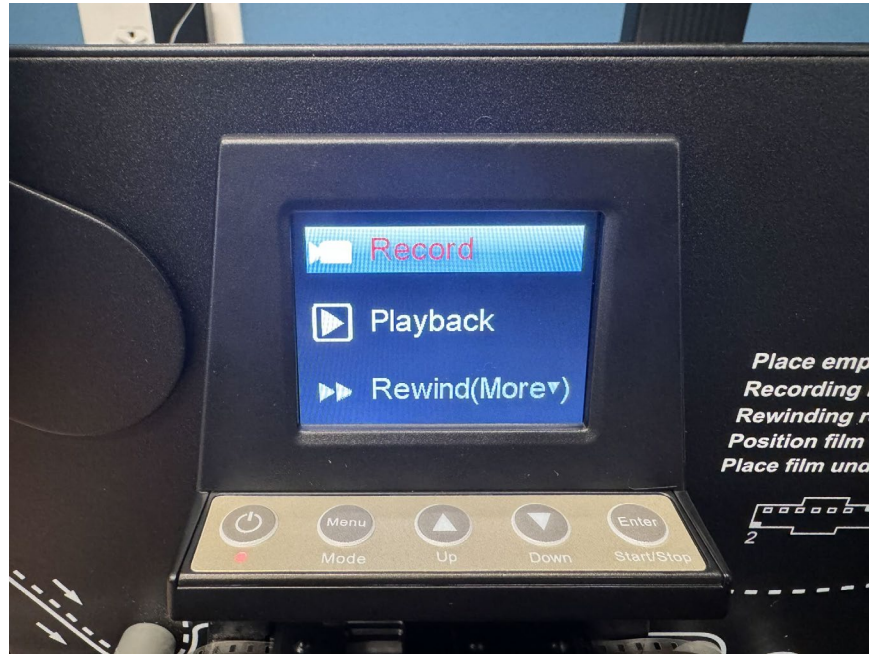

16. You will be prompted to select your film type, so ensure that it is in the correct location.





17. You will know the recording has started when there is a red dot next to the camera symbol.



18. The digitization process is very slow, as the machine is essentially taking a photograph of each frame as it runs through.

19. When you are ready to stop recording, press Start/Stop/Enter.

20. To rewind your film back onto your reel, press Menu and navigate to the Rewind option. Press Enter to select it.



21. Carefully remove both reels and put them on the opposite side (i.e., empty reel on the right, full reel on the left).



22. Make sure that the sprockets are closer to you rather than the machine.





23. Once you have swapped the reels, press Enter/Start/Stop and wait for the film to wind back onto your reel.




24. Remove your film, and return the now empty reel to the right arm.



25. To export your film, plug the machine's USB cable into the computer.

26. Press Menu and then use the arrow buttons to navigate to the USB mode.

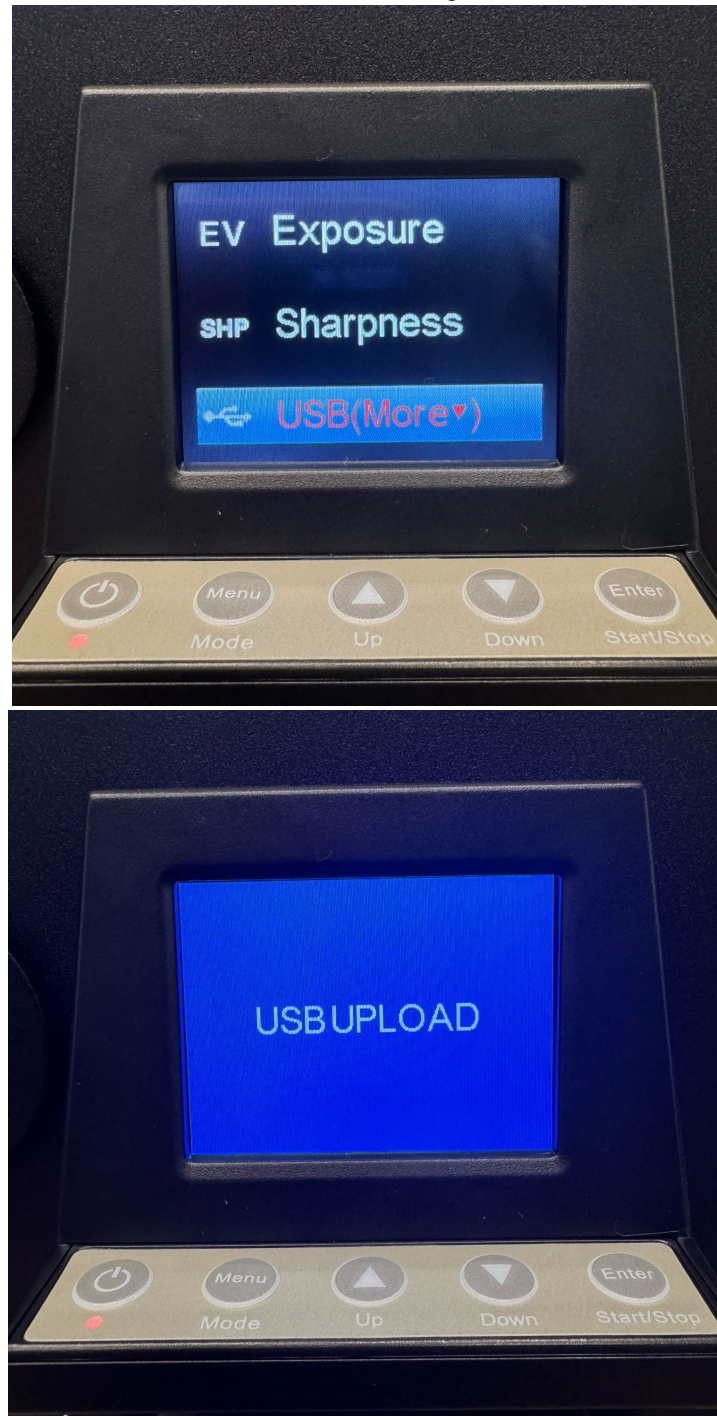

27. A new drive should appear under This PC, with nested folders filmscanner > MOVIES > and then your digitized files. Copy them to your flash drive, then delete them from the SD card's drive.